



NEW *REALISTIC* STYLES FOR SD7, SD9, SD40, SD80 & MIDJAY PRO (with or without AJAMSONIC upgrade!)

BALLAD (15):-

- 8 Beat Ballad
- 8 Beat Ballad-**R**
- 70's Ballad
- Ballad 12-8
- Blues Ballad-**R**
- Folk Singer
- Free Style
- Gentle 16 beat
- God will Make
- Lonely Ballad
- Piano Ballad 6-8
- Smooth Ballad
- Soft Ballad
- Sweet 16 Beat
- Uptown 16

COUNTRY (13):-

- Country Ballad
- Country Beat
- Country_Ballad
- Dixie Band
- Dolly Pop
- Fox Beat
- Francaise
- More Country
- Nashville
- On the road
- Piano Man Waltz
- Scand Fox
- Stand by Yours

DANCE (12):-

- 60's Revival
- Club Dance 1
- Club Dance 2
- Club Dance 3
- Club USA
- Disco Beat
- Disco Funk
- Disco Highlife
- Euro Club 1
- Euro Club 2
- Full House
- Noche Mix

FOLK (21):-

- Brush Polka
- Celtic
- Fado
- Folk Beat 12-8
- Foxtrot
- Irish Waltz
- Jiving South-**R**
- Mazurka-**R**
- Moderato
- Musset-**R**
- Ober Polka-**R**
- Party Fox
- Passodoble
- Polka-**R**
- Quadriglia
- Satarello
- Sirtaky
- Slow Waltz
- Tango Party 1
- Tango Party 2
- Tarantella

LATIN (31):-

- Bajon Argentina
- Batucada
- Beguine
- Bossa Argentin
- Bossa Brazil
- Caliente
- Cha Cha-**R**
- Cumbia-**R**
- Gentle Bolero
- Les Antilles
- Mambo
- Mambo Hit-**R**
- Merenguito-**R**
- Modern Balada
- Modern
- Cumbion
- Normal Samba
- North Bachata
- Rapido
- Reggae Drop
- Reggae Shine
- Reggaeton-**R**
- Romantica
- Rumba Flam
- Salsita

- Samba Brazilia
- Secret Zouk
- South Bachata
- Sunny Bossano
- Vallenato
- Vocal Rumba

PARTY (10):-

- Boogie Woogie1
- Boogie Woogie2
- Can Can
- Elvis Boogie
- Flip Beat
- Flip Fox
- Macarena
- Meneito
- Schlager
- Shuffle Fox

POP (13):-

- Cool Funk
- Don't KnowWhy
- English Tune
- Folk Pop
- Fusion
- High Tide Pop
- Italian Beat
- Light Pop
- Musical Pop
- Pop Mixture
- The Streets
- Trading Pop
- Wonderful Pop

ROCK (16):-

- Blues-**R**
- Cool Twist
- Funky Boy-**R**
- Hard Rock
- Heaven's Door
- High Gospel-**R**
- Latin Rock
- RnBlues-**R**
- Shuffle Rock
- Slow Rock 1
- Slow Rock 2
- Soul Beat
- Soul Train
- Standard Rock

- Surf
- Twisted Rock

SWING (17):-

- Big Bad
- Dixie-**R**
- Easy Jazz
- Jazz Man
- Jazz Waltz
- Live Swing
- Medium Fox
- Medium Orches
- Night Swing
- Only Swing-**R**
- Organ Club-**R**
- Organ Rock-**R**
- Samba Jazz
- Slow Orches
- Slow Fox-R
- Swing Ballad

UNPLUGGED (18):-

- Brazil Guitar
- Country Guit 1
- Country Guit 2
- Country Guit 3
- Flamenco Guitar
- Free Style Man
- Guitar Andaluz
- Guitar Ballad 1
- Guitar Ballad 2
- Guitar Bossa
- March Pop 4-4
- March Pop 6-8
- Pop Beat
- Pop Guitar
- Ragtime Pop
- Ringing 6-8
- Rumba Pop
- Shuffle Pop

**** R = Styles with RIFF (smart chord progression based on chords played in Arranger D).**

Styles can be installed in any unit – with or without the AJAMSONIC package!



NEW EXPRESSIVE SOUNDS FOR SD7, SD9, SD40 & SD80 (with or without AJAMSONIC upgrade!)

ACCORDION (16)

- Alpen 2
- Bandoneon
- Bell Acoustic
- Blues Harmony
- Cassotro
- Conservato
- Crosio
- Fisa
- French
- French Orchestral (Art)
- Harmonica
- Master Accordion
- Musset Technique
- Steirisch
- Swing Fisa
- Tango

BRASS & SFX (9)

- Folk Bass
- Fusion
- House Bass
- Modeling Bass (Art)
- Slap Bass
- Sub Bass
- Synth Bass 1
- Synth Bass 2
- Wild Bass

BRASS (33)

- Brass Section (Art)
- Clarinet Trumpet
- Cool Brass
- Euphonium
- French Horn 1
- French Horn 2
- Gold Trumpet
- Hit Trumpet
- Horn Pad
- Horn & Harmony (Art)
- Live Brass (Art)
- Mellow Trumpet
- Mute Trumpet
- Pop Brass 1
- Pop Brass 2
- Sea Trumpet
- Soft Trombone
- Soft Brass (Art)
- Slide Trombone (Art)
- Stereo Brass (Art)
- Swing Trumpet (Art)

- Synth Brass
- Tender Trumpet (Art)
- Trio Trumpet
- Trumpet & Harmony
- Trombone (Art)
- Trumpet & Ahh (Art)
- Trumpet & Harmony
- Trumpet 1
- Trumpet 2
- Trumpet & Sfx 1 (Art)
- Trumpet & Sfx 2 (Art)

ETHNIC (20)

- Banjo 1
- Banjo 2
- Bouzouki 1
- Bouzouki 2
- Bouzouki 3
- Dekala
- Ethnic Flute
- Kalimba
- Latin Flute
- Mandolin 1
- Mandolin 2
- Mandolin 3
- Shamisen
- Sitar
- Spirits
- Steel Drum 1 (Art)
- Steel Drum 2 (Art)
- Steel Drum 3
- Tres
- Zjlvago

GUITAR (35)

- American Strato (Art)
- Blues Guitar
- Chorus Strato (Art)
- Clean Guitar 1
- Clean Guitar 2
- Country
- Distorso 1 (Art)
- Distorso 2
- Folk
- Hawaiian 1
- Hawaiian 2
- Jazz Guitar
- Muted 1
- Muted 2
- Nylon Guitar
- Over Drive Guitar
- Phase Guitar

- Powered Guitar 1 (Art)
- Powered Guitar 2 (Art)
- RK Blues
- Rock 1
- Rock 2
- Rock & Roll
- Spanish 1
- Spanish 2
- Steel Guitar
- Strato Sfx (Art)
- Strato & Vibes
- Strato 1 (Art)
- Strato 2 (Art)
- Strato 3 (Art)
- Valve Lead
- Vintage
- Western
- Wah Guitar

ORGAN (19)

- Church 1
- Church 2
- Drawbar
- Gospel
- Hammond 1 (Art)
- Hammond2 (Art)
- Hammond 3 (Art)
- Hammond C3 (Art)
- Italian Church
- Jazz
- Organ Percussion 1
- Organ Percussion 2
- Padded Organ
- Percussion Organ
- Pop Organ
- Rock Percussion
- Tone Bar
- Tone Wheel
- X-mas B3

PAD (15)

- Airy
- Analog
- Crystal
- Digital Pad 2
- Digital Pro
- Drone
- Fantasy 1
- Fantasy 2
- Ice & Harmony
- Phaser
- Science Sfx

- Space
- Sweep
- Warm air
- Warm pads

PIANO & CHROM (24)

- Bright Piano
- Clavinet Piano
- DX 1
- Electric
- Fender Piano
- Grand Piano (Art)
- Grand FM Piano
- Grand Piano (Art)
- Grand Mark
- Honky Pole
- Honky Tonk
- Jingle Piano
- Mark Msk
- Mark Piano
- Octave Piano 1
- Octave Piano 2
- Piano Phase
- Piano Rock
- Rhodes
- Sparks (Art)
- Suitcase
- Super FM
- Vibration
- Visual

SAX & FLUTE (28)

- Glenn Miller (Art)
- Andes & Harmony
- Andes & Harmony
- Andes Solo
- Baritone
- Bassoon
- Boogie Sax (Art)
- Clarinet
- Dwarf Flute
- English Horn
- Flute
- Flute & Whistle
- Growl Sax (Art)
- Lounge tenor
- Natural Sax (Art)
- Ocarina
- Pan Flute 1
- Pan Flute 2
- Pan Flute 3
- Pop Flute (Art)

- Rock Sax (Art)
- Sax & Harmony
- Sax & Vibes
- Soprano (Art)
- Supra Sax (Art)
- Swing Sax (Art)
- Tenor Sax
- Whistle 1 (Art)
- Whistle 2

STRING & CHOIR (21)

- Big Strings
- Bow Strings 1
- Bow Strings 2
- Choir Vocal (Art)
- Choir Voice (Art)
- Choir Wow (Art)
- Choir and Organ
- Classic Orchestra
- Girls Ohh (Art)

- Harp
- Mandolin
- Piccicato
- Pizzicato
- Romantic
- Strings & Timpani (Art)
- Stratovan
- Strings
- Synth Voice
- Synth String
- Violin 1
- Violin 2

SYNTH (17)

- 5th
- Chiff
- Cycle
- Dance
- Juno
- JX

- Minimug
- Mug
- Odyssey
- Piano & Synth
- Poly
- Poly Synth
- Saw tooth
- Sonic Synth
- Synth Box 1
- Synth Box 2
- Trance

** Art = Sounds with Articulation/VCE. The characteristics and expressions of these voices are enhanced when you play harder, faster or hold down a note.

Sounds can be installed in any unit – with or without the AJAMSONIC package!

SUPER GOLD PACK INSTALLATION – KETRON

SD7/SD9/SD40/SD80/MIDJAY PRO

Congratulations on your purchase of the new SUPER GOLD PACK. This pack can be installed in either standard instruments or those with the AJAMSONIC package installed. It includes:-

- Over **100** new professional styles for your instrument.
- Over **300** new Audio Drums
- Bonus Midifiles, MP3 and Videos
- Over **90** new Professional Workstation voices (some with new VCE-articulation, Leslie effectsetc for SD7, SD9, SD40 and SD80 only!)

INSTALLING AND USING THE NEW STYLES.

The Gold Package USB Drive comes with 1 folder (USER_VOICE) and a file called StylePack.tar.gz.gpg (instruction on how to install is also included).

- Insert the USB stick into your instrument and turn on the instrument.
- After boot up is complete, press **MEDIA** to display the different media connected to your instrument. The USB drive should be displayed.
- TOUCH the USB drive on the screen to display both the USER_VOICE and StylePack.tar.gz.gpg files.
- Touch the file **StylePack.tar.gz** twice (or touch it once and press **ENTER**) to load the styles. This may take a few minutes.
- Styles will be loaded into the USER – UNPLUGGED folder.
- When complete, turn off the instrument and after 1 minute, turn it back on.
- To play the styles,
 - Press the **STYLE** button.
 - Touch **USER STYLES** on the screen to access the USER STYLES folder.
 - Touch the **UNPLUGGED** style category
 - Touch the style you want to play to load and play it. Loading is EXTREEMLY FAST as you will notice!

INSTALLING AND USING THE NEW SOUNDS (SD7, SD9, SD40, SD80)

The new sounds will have to be copied over manually from the USB stick into the corresponding User Sound sub-folders of your instrument. In other words, as an example, the new accordion sound “AJAM Alpen 2” found in the ACCORDION folder will have to be copied from the USER_VOICE/ACCORDION sub folder of the USB stick into the USER_VOICE/ACCORDION sub folder of the SD7’s internal drive/memory.

- Insert the USB stick into your Instrument
- Wait about 7 seconds (*to allow the instrument recognizes the USB stick, unless it is still plugged in from above*), and press the **MEDIA** button to display the connected media
- Touch the USB icon (if you were not already using the USB stick above for styles).
- Touch **DISK EDIT** (Light flashes denoting you are in DISK EDITING MODE)
- Touch the USER_VOICE folder twice to display it’s contents
- Go to the first folder (ACCORDION) and touch it twice to display it’s contents
- Select all files (either by touching each one or touching SELECT ALL on the bottom right corner of the screen).
- Touch **COPY** and touch the instrument’s SSD.
- Touch USER_VOICE
- Touch ACCORDION to display the contents of this folder (it may be empty if you have not created any user voices prior to this).
- Touch **PASTE** and ok the next message.
- All the new accordion sounds will be copied over.
- REPEAT THESE STEPS ABOVE TO COPY ALL THE OTHER SOUNDS FROM THE BASS_SFX, BRASS, ETHNIC ... etc., folders over.

THE FASTEST WAY TO ACCOMPLISH THIS IS TO CONNECT YOUR INSTRUMENT and THE SUPER PACK USB STICK TO A COMPUTER AND DRAG AND DROP THE FILES FROM THE RESPECTIVE FOLDERS INTO THE SD7!